

Kilco^K

SCIENCE IN SOLUTION


AUTOSAN BLUE

LOW FOAM ALKALINE CIRCULATION CLEANER FOR USE WITH ALL AUTOMATED MILKING EQUIPMENT

- Suitable for use with all parlours, bulk milk tanks and robotic / electronic cleaning systems
- Low foaming alkaline circulation cleaner
- Chlorine free




RECOMMENDED USAGE

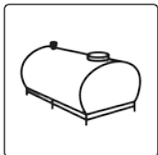

This chemical is suitable for use with all parlours milk tanks and robotic / electronic cleaning systems.

Use according to instructions provided with the equipment installation manual or at the usage rate of 0.5% dilution hot (70°C) or 1% cold. Circulate for 10 minutes. Run solution to waste. Rinse system well using clean cold water.

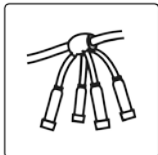

This product can be used in conjunction with Peracetic acid in the final rinse water at 200ml in 100 litres of water. Do not mix with acids. Ensure the system is thoroughly rinsed before use of Peracetic acid. Use Kilco Milkstone Remover in a hot wash at least once per week at 1% dosage rate to remove mineral deposits



ALWAYS ADD PRODUCT TO WATER AND NOT WATER TO PRODUCT.

- Storage:** Store in a dry area
- Pack Size:** 20, 200, 1000 litre
- Shelf Life:** 2 years from date of manufacture

FOR HEALTH & SAFETY INFORMATION, REFER TO THE SAFETY DATA SHEET

KILCO (INTERNATIONAL) LTD.
BROOMHOUSES 2 INDUSTRIAL ESTATE
OLD GLASGOW ROAD, LOCKERBIE.
DG11 2SD

Tel: +44 (0) 1576 205 480
Fax: +44 (0) 1576 205 483
Email: enquiries@kilco.co.uk

TRIED • TESTED • TRUSTED